

For details of top end see sheet 3

3/8" thick Finnish birch or Baltic birch (marine grade plywood as third choice)

8 5/8" X 12 3/4" Foot well cutout (see sheet 3)

For details of compound curve side see sheet 2

51 1/8"

29 3/4"

For details of mounting hole locations see sheet 4

**MG TD Midget**  
**Floorboard Drawings**

4" X 1 1/2" cutout


8 1/2"

19 3/4" at widest


Roy Challberg  
Sheets 1 through 6  
Rev. 4  
4-7-2010

Sheet 1

Driver's Side Floorboard  
Compound Curve

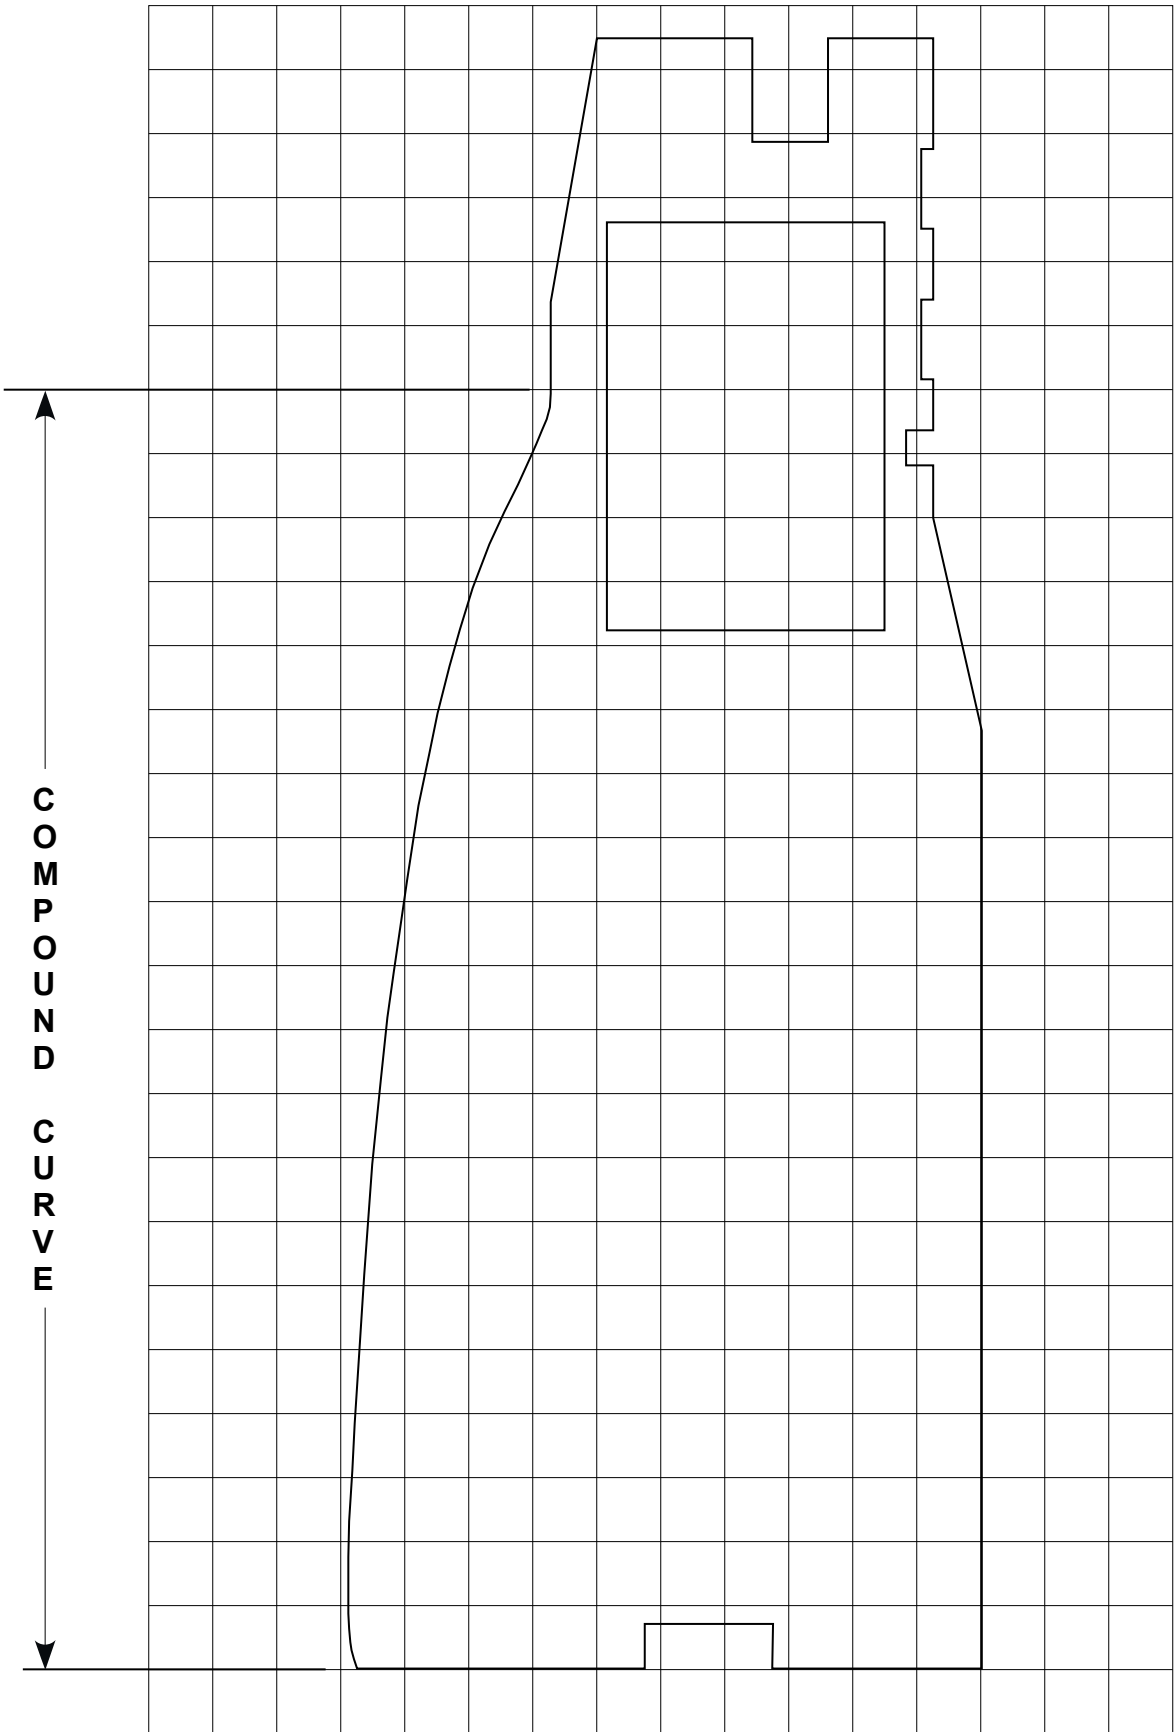

Grid sizes 2" by 2"

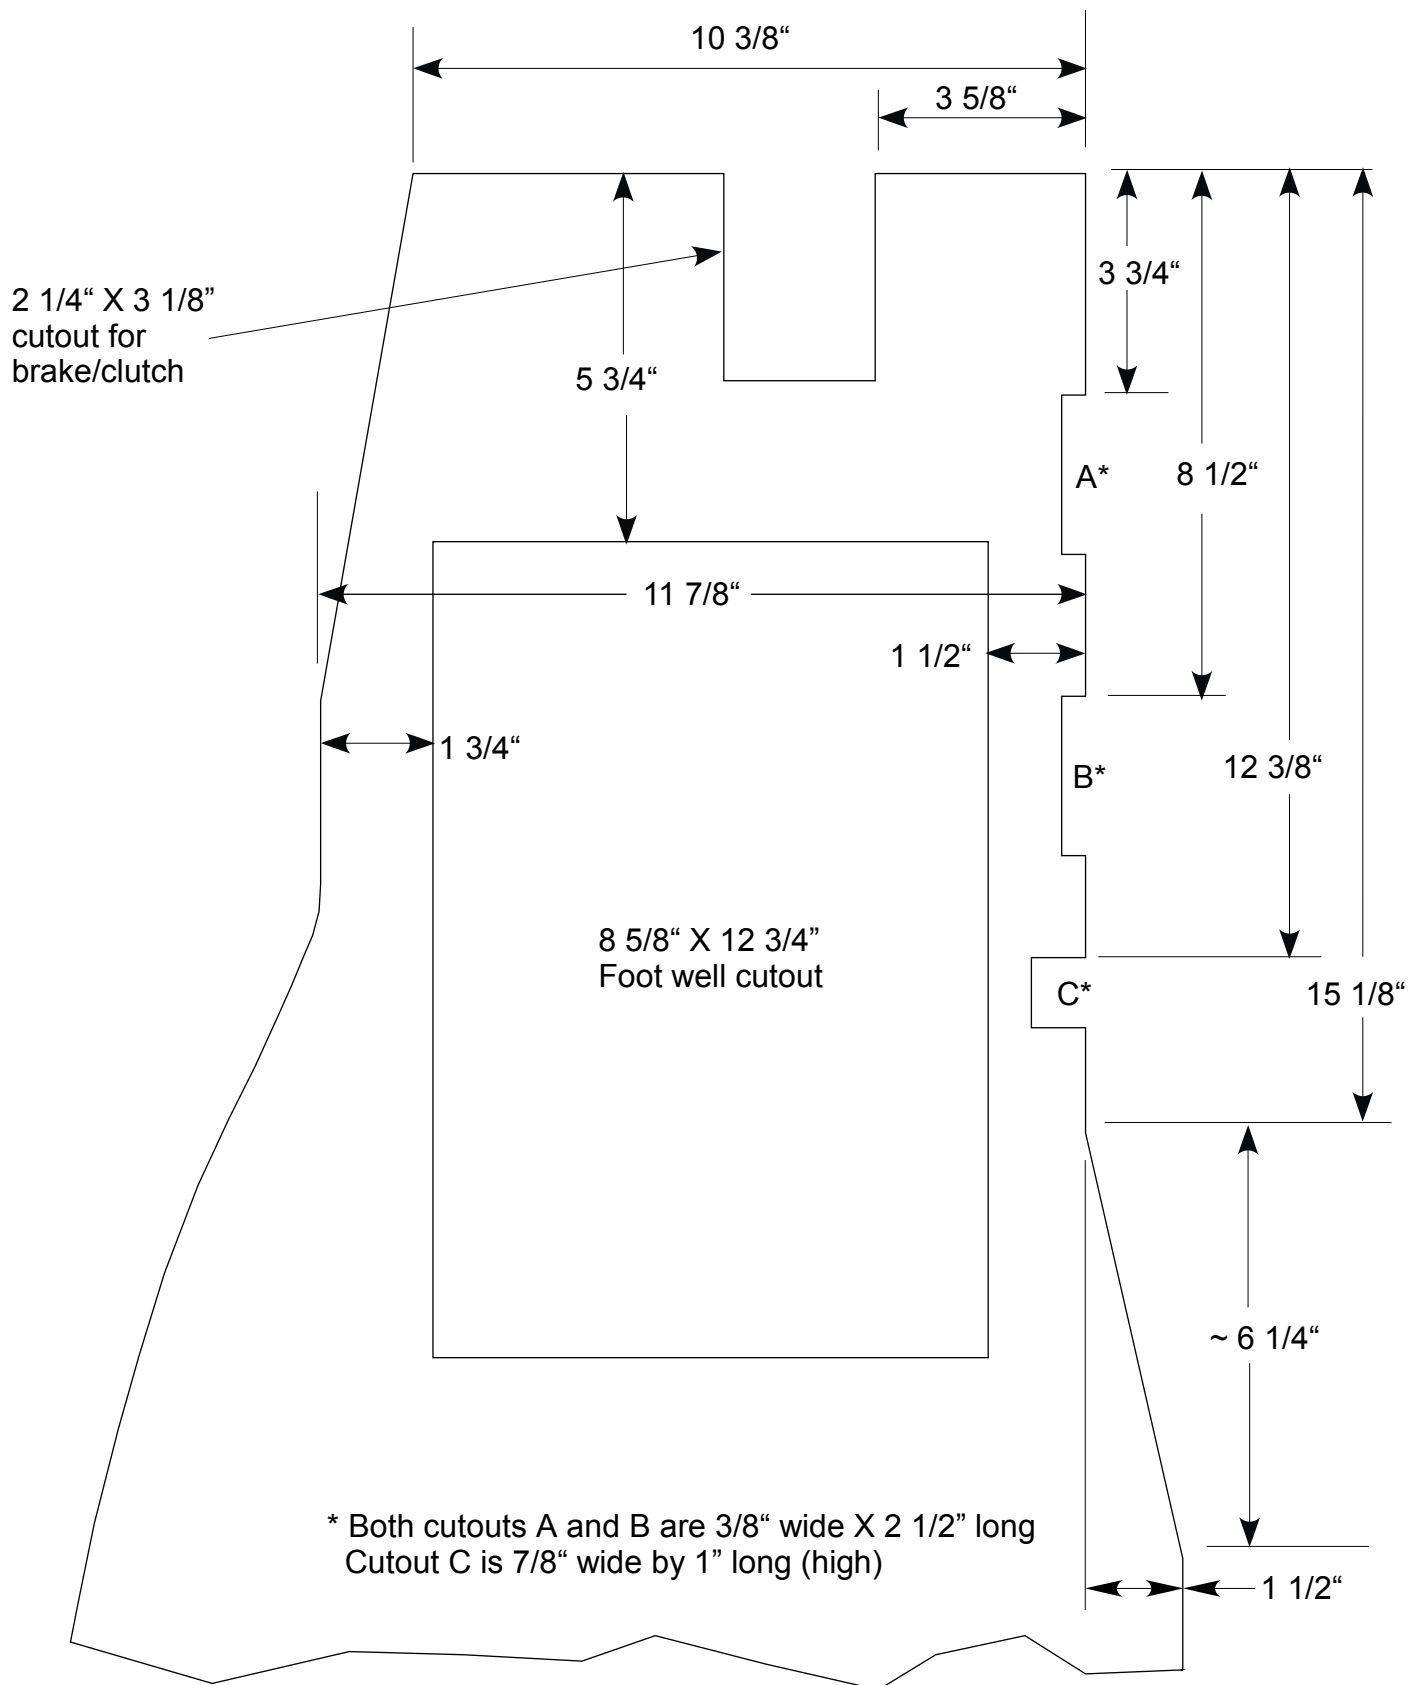

Foot well cutout (driver's side only)  
 Beginning at chassis number TD 4237 (Nov. 7, 1950)  
 Rubber padded foot well added


## Driver's Side Floorboard Hole Locations

Holes A,B and E thru K  
are ~ 3/8" I.D. for hold down bolts.  
Holes C, D, L and M are for "T" nuts  
mounted from back.

Holes L and M are for seat brackets.  
Check location and drill after seats are  
ready to be installed.

Holes A and B are 5/8" in from the edge.  
Holes C thru I are 1/2" in from the edge.

\*Bottom side recesses (3)  
used as relief for body  
tub-to-frame mounting  
bolt heads.



Recesses ~ 1/4" deep  
Check location and  
clearance to bolt heads.

~ 2 1/2" wide\*  
X 1 3/8" high\*

Paint all surfaces and  
all edges with at least  
two coats of good  
quality wood primer  
followed by two coats  
of semi-gloss black paint.

~1 7/8" wide\* X 1 3/8" high\*

3 3/8"  
to centerline\*

20 1/4"  
to centerline\*

3/4"

~ 1" wide\*  
X 1 3/8" high\*

5 3/8"  
to centerline\*

3/4"

3/4"


3/4"

3/4"


2 5/16"

13 1/2"

3 3/8"

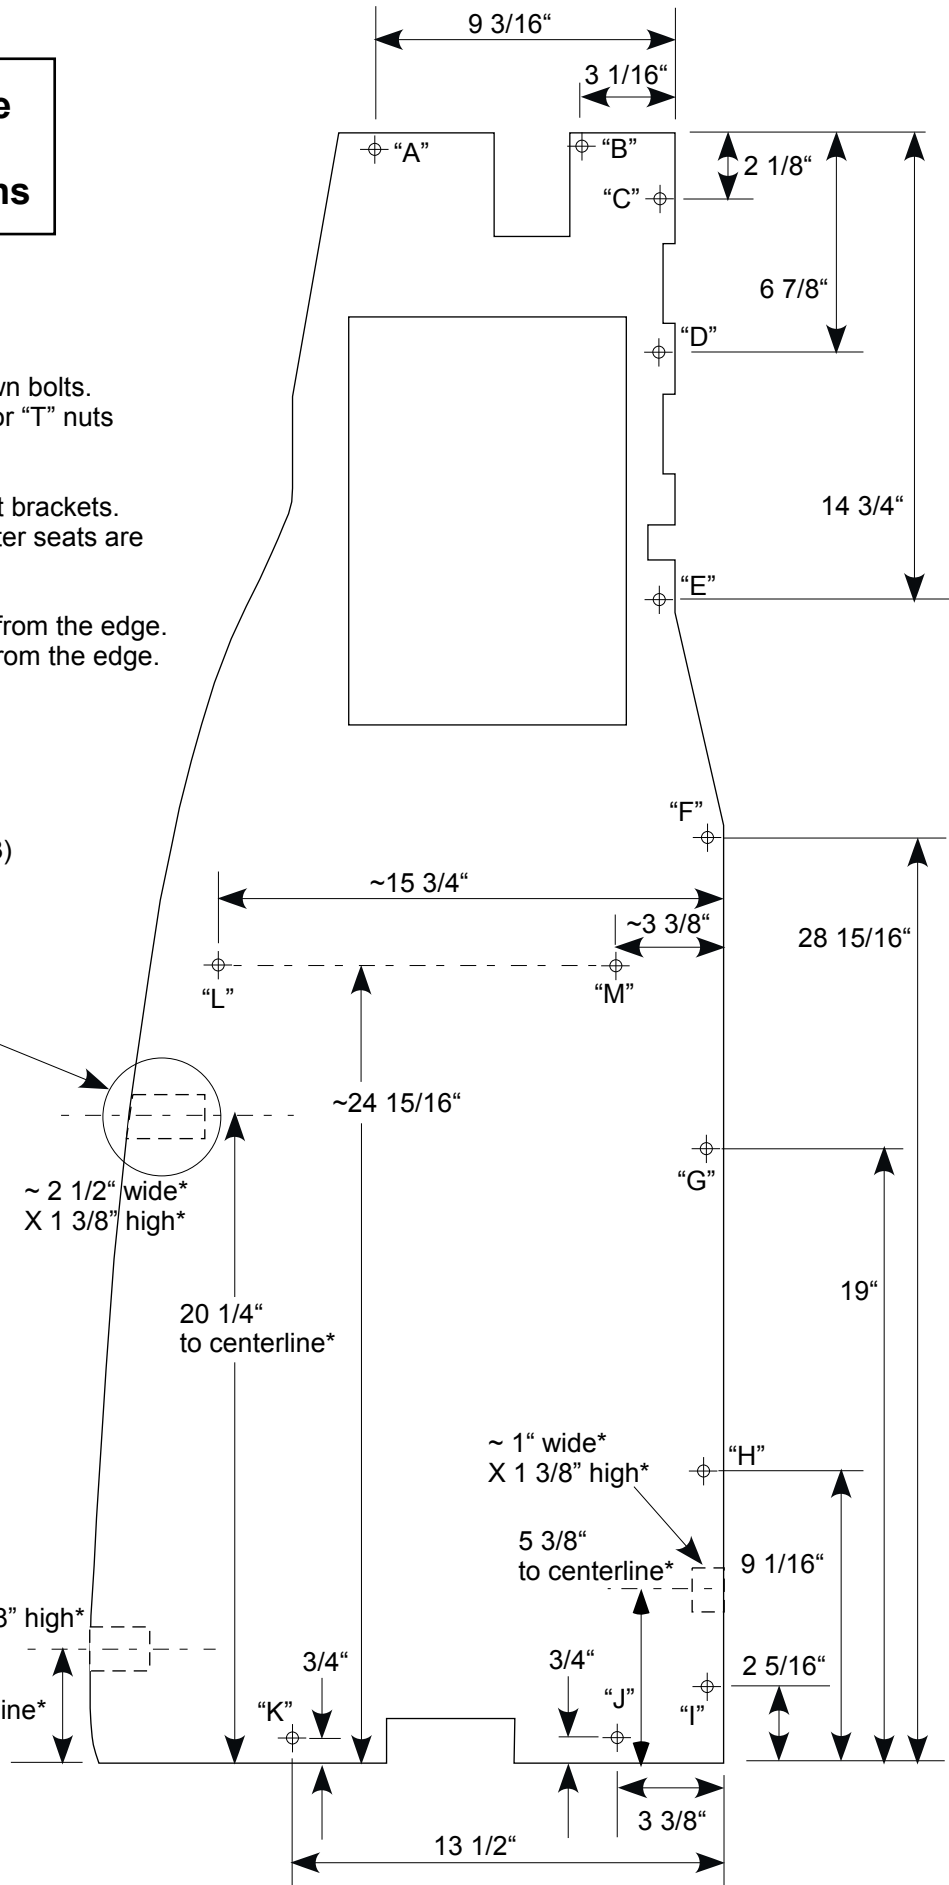

# 

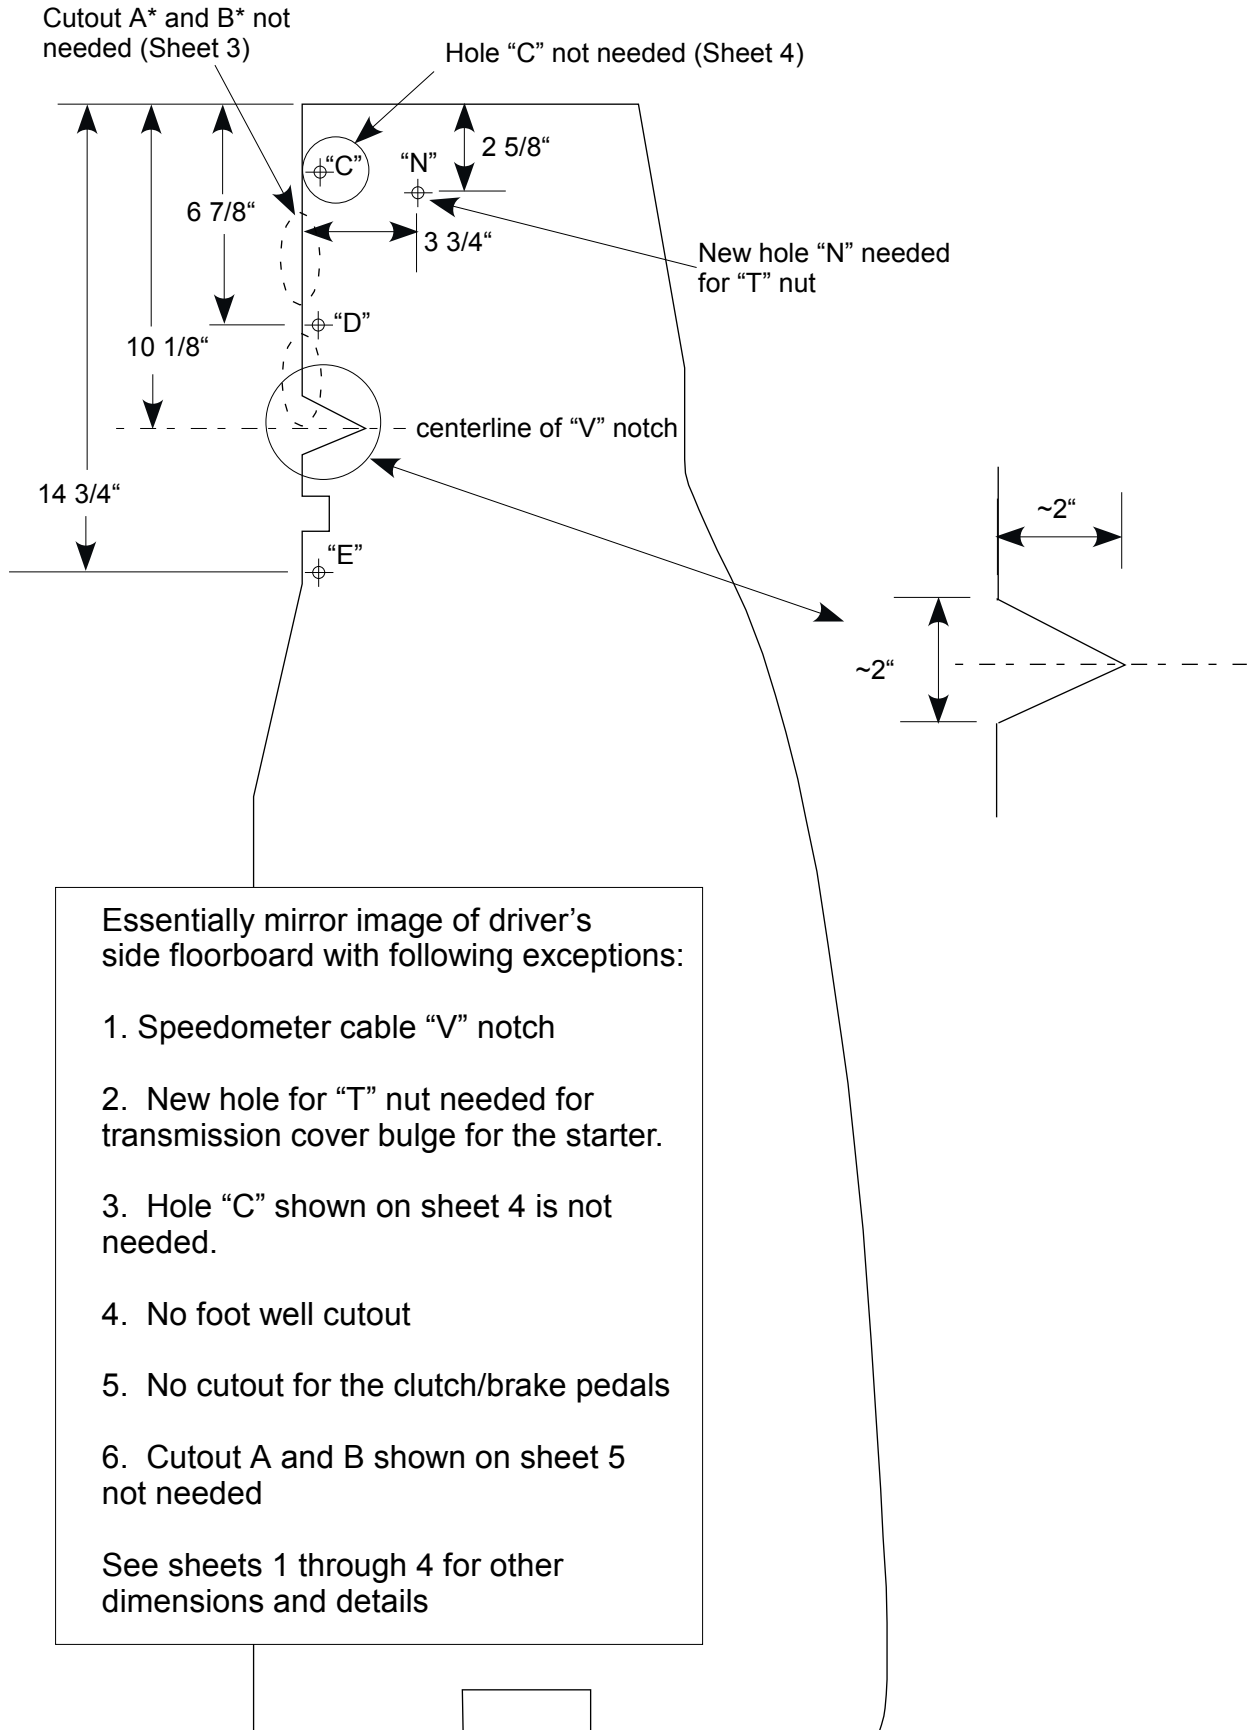

## **MG TD Floor Board Specifications**

### Materials:

Wood: 3/8" thick - 3 choices

1. Finnish Birch
2. Baltic Birch
3. Marine grade plywood

Note: Plywood close to the thickness of 0.375" can be used. Baltic birch may be specified in metric thicknesses. Also 1/2" plywood could also be used but 3/8" is actual original size. Some Baltic or Finnish Birch panels may only come in 5 ft. X 5 ft. sizes.

### "Tee" Nuts

Holes "C" and "D" take "Tee" nuts sizes 1/4"-20 UNC to accommodate the bolts that hold the floor boards down. 1/4" 26 BSF (British Standard Fine) are original. The BSF nuts may be hard to find.

Holes "L" and "M" take 5/16-18 UNC "Tee" nuts to accommodate the bolts that hold down the front of the seats.

### Finish

Paint all surfaces and all edges with at least two coats of good quality wood primer, followed by two coats of semi-gloss black paint.